

INSTRUCTIONS

AIR EQUIPMENT FOR RAILROAD LOCOMOTIVES



CONTENTS

	TAB
BRAKE EQUIPMENT	AE-1
AIR COMPRESSOR	AE-2
AUXILIARY AIR VALVES	AE-3
AIR HORN	AE-4

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

